


GENERAL KNOWLEDGE

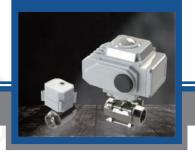

General Instruction for Electric actuator

For your own safty, please read the instruction below before you inquiring / using our products.

Wiring

- ST Series. When use DC24V power. No need to partition anode and cathode
- Wiring project should carry on by the qualified electric engineer according to the electrical facility technique standard.
- It forbids to do wiring project in rainy day or in high humidity.
- Please confirm wiring connection drawing correct connection.
- This device have special cable, no need interior wiring.
- No-openning the tope cover (already have cables).
- When electrifying, absolutely forbid to connect the opening and closing switch at the same time.
- When using line-pipe, operator should adopt waterproof measure.
- When there's water hammer phenomenon, please aware of valve switching time adjustment and choose the suitable product.
- Operator should make sure that the electric appliance of this valve is higher than line pipe, in order to prevent water from the inflowing electric appliance along line which leads to damaging of maching.

Operating

Manual operating

- Uninstall manual insert hole cover. Below having lever shaft hexangular hole (subtense 4mm).
- Insert socket head wrench to hexagon, "close" is clockwise, "open" is counter-clockwise.
- When electrifying,manual operation is forbidden. When manual operation,must confirm the display on opening meter. To avoid malfunction, when full open and full off, DO NOT use hexagon wrenches to turn forcefully.

Electromotion operation

- Before electromotion operation, please use the manual operation method, to confirm the opening meter and valve are in the same position, and make sure the wire connection is correct, then do the electro-motion operation.
- When full open, red LED is on, when full off, green LED is on.

Maintenance

- Because use of the molybdenum disulfide lithium-based grease so no need to add oil.
- Work after a long stop, please confirm if he core deflecting and torsion happen, and if it has good slippage.

Noted items of indoor installation

- The common product, be installed in the room full of explosive air unless explosion-proof product.
- If installed at certain place having water or splashed material, operator is supposed to install the protection cover additionally forcovering complete-machine safely.

Noted items of outdoor installation

- Please installing protection cover above complete-machine additionally in order to avoid rain of sunshine (The shining of sunshine outdoor would lead to high-temperature which accelerates ageing of components, even losing effective. The rain would accelerate aging of rubber-pad, moreover, the product will be damaged if failing in water proof conduction).
- Operator should save necessary space needed by manual wire-in operation in advance.













Electrical Valve Actuator



Wiring connection

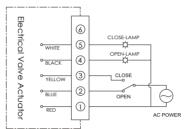

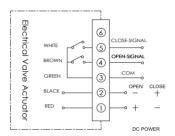

Specifications Characteristics

Series	ST-	ST-05B ST-10B		ST-20B		ST-40B		ST-60B		
Power voltage	DC24V	AC110V AC220V	DC24V	AC110V AC220V	DC24V	AC110V AC220V	DC24V	AC110V AC220V	DC24V	AC110V AC220V
Acting range		0 ~ 3	60°		0 ~ 90°		0 ~ 90°		0 ~ 90°	
Output torque	50Nm		100Nm		200Nm		400Nm		600Nm	
Acting time	7Sec	20Sec	10Sec	30Sec	12Sec	30~60Sec	15Sec	30~60Sec	20Sec	45~60Sec
Rating electricity	0.5A	0.48A 0.24A	0.85A	0.7A 0.32A	1.2A	1.6A 0.88A	2.5A	2.2A 1A	2.5A	2.2A 1A
Motor power	10W	15W	20W	25W	40W	40W	70W	90W	90W	90W
Insulation resistance(M Ω)	100/250 VDC	100/500 VDC	100/250 VDC	100/500 VDC	100/250 VDC	100/500 VDC	100/250 VDC	100/500 VDC	100/250 VDC	100/500 VDC
Voltage resistance rating (1 Minute)	500VAC	1500VAC	500VAC	1500VAC	500VAC	1500VAC	500VAC	1500VAC	500VAC	1500VAC
Use of the environment	Temperature: -25~+55°C ; Humidity: 10~90%RH									
Defend level	IP-68									
Body material	Aluminium die-casting									
Install direction	360 degrees omni-directional									
Electriad connection	Each one or M18*1.5 water-proof cable connectors									
Weight	2.8kg 4.4kg 9.5kg 10kg 10kg						kg			



PRODUCT/ MOTORIZE BALL VALVE




Installation

When use DC24V power.no need to partition Anode and cathode.

- Wiring project should carry on by the qualified electric engineer according to the electrical facility technique standard.
- It forbids to do wiring project in rainy day or in high humidity.
- Please confirm wiring connection drawing correct connection.
- This device have special cable, no need interior wiring.
- No-openning the tope cover (Already have cables).
- When electrifying, absolutely forbid to connect the opening and closing switch at the same time.
- When using line-pipe, operator should adopt waterproof measure.
- Operator should make sure that the electric appliance of this valve is higher than line pipe, in order to prevent water from inflowing electric appliance along line which leads to damaging of maching.

Dimensions (mm)

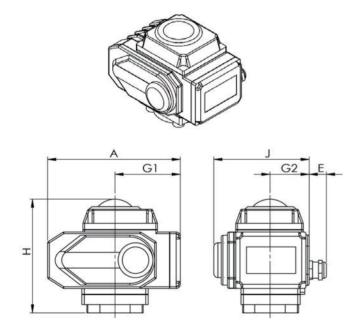

Code No.	А	Е	G1	G2	Н	J
ST05	160	24	78	50	151	114
ST10	196	24	99	50	170	122
ST20	256	24	135	65	208	156
ST40	256	24	135	65	208	156
ST60	256	24	135	65	208	156

Maintanence

- Because use of the molybdenum disulfide lithium-based grease, so that no need to add oil.
- Work after a long stop, please confirm if he core-deflecting and torsion happen, and if it has good slippage.

Noted items of indoor installation

- The common product,be installed in the room full of explosive air unless explosion-proof product.
- If installed at certain place having water or splashed material, operator is supposed to install the protection cover additionally forcovering complete-machine safely.
- Operator should save necessary space needed by manual wire-in operation in advance.

Noted items of outdoor installation

- Please installing protection cover above complete-machine additionally in order to avoid rain of sunshine (The shining of sunshine outdoor would lead to high-temperature which accelerates ageing of components, even losing effectiven, The rain would accelerate aging of rubber-pad, moreover, the product will be damaged if failing in water proof conduction).
- Operator should save necessary space needed by manual wire-in operation in advance.

Operating

Manual operating

- Uninstall manual insert hole cover. Below having lever shaft hexangular hole (subtense 4mm).
- Insert socket head wrench to hexagon, "close" is clockwise, "open" is counter-clockwise.
- When electrifying, manual operation is forbidden, when manual operation, must confirm the display on opening meter. To avoid malfunction, when full open and full off, don't use hexagon wrenches to turn forcefully.

Electromotion operation

- Before electromotion operation, please use the manual operation method,to confirm the opening meter and valve are in the same position,and make sure the wire connection is correct, then do the electro-motion operation.
- When full open,red LED is on , when full off,green LED is on.



PRODUCT/ MOTORIZE BALL VALVE




PVC Motorize wafer-type Butterfly Valve



Dimensions (mm)

Specifications Characteristics

Model	2D-P Series					
Medium Temp.	-10°C - 70°C					
ENV Temp.	-10°C - 60°C					
Pressure	0 - 0.7 Mpa					
Function	Switch control, Proportional control					
Actuator Mat.	Al alloy die casting, Protect level IP-67					
Valve body Mat.	UPVC					
Valve disc Mat.	UPVC					
Valve seat Mat.	EPDM					
Flange Spec.	JIS, ANSI, DIN					

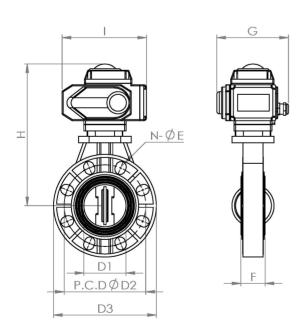

Body Dimension		DN 50	DN 65	DN 80	DN 100	DN 125	DN 150	DN 200	DN 250	DN 300
Pressure Kgf/c m²		7	7	7	6	5	5	4	3	3
JIS	D2	120	140	150	175	210	240	290	335	400
	N- E	4-19	4-19	8-19	8-19	8-23	8-23	12-23	12-25	16-25
ANSI	D2	120.4	139.5	152.4	190.5	216	241.5	298.5	362	432
ANSI	N-E	4-19	4-19	4-19	8-19	8-22	8-22	8-22	12-25	12-25
DIN	D2	125	145	160	180	210	240	295	355	412
	N-E	4-18	4-18	8-18	8-18	8-18	8-18	8-23	12-23	12-23
D1		56	71	85	105	131	153	204	255	307
D	3	160	185	195	215	250	285	340	395	445
		43	46	46	52	56	56	60	68	78
Н		258	261	300	310	373	386	420	448	478
1		160	160	196	196	256	256	256	256	256
G		135	135	146	146	180	180	180	180	180
Actuator Suggest		ST 05	ST 05	ST 10	ST 10	ST 20	ST 20	ST 40	ST 40	ST 60


^{*} Actuators above the valve are divided into High torque and Low torque, size are different. Actual actuator dimension based on the real product.



PRODUCT/ MOTORIZE BALL VALVE



How to select model

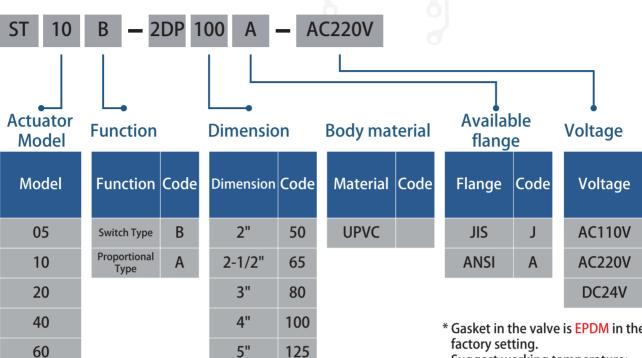

* Actuator Proportional type Input / Output signal 4 - 20 mA.DC in factory setting.

If you have different request, welcome to discuss with us.

	50
2-1/2"	65
3"	80
4"	100
5"	125
6"	150
8"	200
10"	250
12"	300



^{*} Gasket in the valve is **EPDM** in the Suggest working temperature: -10°C ~ 70°C